



# MetaBox<sup>Pro</sup>

HS200 / HS500

用户指南

User Manual

# 目录

中文说明书 .....	1-14 页
-------------	--------

产品清单 .....	2
网络使用环境 .....	2
规格参数 .....	3
产品图示 .....	4
硬盘安装 .....	5
设备连接与开关机 .....	8
客户端下载与安装 .....	9
用户注册与登录 .....	10
文件管理 .....	12
安全须知 .....	10
保修与声明 .....	13

English Manual.....	P15-28
---------------------	--------

What is in the box .....	15
Network usage environment .....	15
Specifications .....	16
Product Illustration .....	17
Installing the hard disk .....	18
Device Connection Startup And Shutdown.....	21
Client Download And Installation.....	22
User Registration And Login.....	23
File Management .....	25
Notice .....	27
Declaration.....	28

感谢您选择 ORICO !

在您使用本产品前，请仔细阅读这一份使用说明书!

## 产品清单

1. 产品本体 .....	1PCS
2. 网线 .....	1PCS
3. 电源线 / 电源适配器 .....	1PCS
4. 螺丝刀 .....	1PCS
5. 螺丝包 .....	2PCS
6. 使用说明书 .....	1PCS

因产品生产批次不同，产品包装、外观或者配件可能会有所变更，并与此使用说明提供的图片、外观、说明不一致，请您以收到的实际产品为准，若由此给您带来不便请您谅解，谢谢!

## 网络使用环境

1. MetaBox Pro 需要连接至 Internet 网络环境下（可上网），才可以使用。
2. 建议您把 MetaBox Pro 接入到一级路由器之下，网络响应速度越快。
3. 请您将路由器的“UPNP”选项，设置为“开启”状态。


## 规格参数

产品型号	MetaBox <sup>Pro</sup>	
产品型号	HS200	HS500
硬盘位	双盘位	五盘位
产品尺寸	222(L)×145(W)×129.5(H)mm	222(L)×145(W)×231.5(H)mm
产品材质	铝合金 +ABS	铝合金 +ABS
CPU	Intel Celeron N4020 双核	Intel Celeron N4120 四核
闪存	8GB eMMC	8GB eMMC
内存容量	4GB DDR4	4GB DDR4
内部接口	SATA3.0 6Gbps×2, M.2 NVMe 2280×1	SATA3.0 6Gbps×5, M.2 NVMe 2280×1
外部接口	2.5 Gigabit Ethernet×1, USB3.0 Type-A 5Gbps×2	2.5 Gigabit Ethernet×2, USB3.0 Type-A 5Gbps×2
网络传输速率	2.5GbE	2.5GbE
RAID 模式	LVM / RAID 0 / RAID 1	LVM/ RAID 0 / RAID 1 / RAID 5 / RAID 10
电源适配器	12V---5A, 60W	12V---10A, 120W
兼容硬盘类型	3.5" SATA HDD, 2.5" SATA HDD, 2.5" SATA SSD	
工作环境	温度：0°C至 40°C，湿度：5% 至 95%	



## 产品图示

型号：HS200

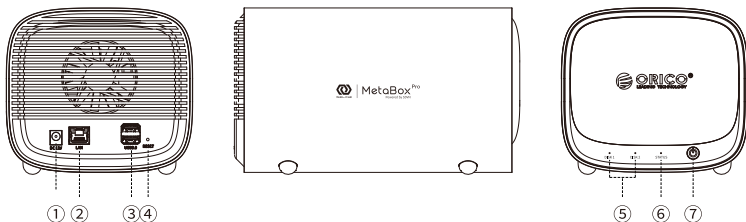

① 电源输入接口

② LAN 网络接口

③ USB3.0 接口


④ RESET 重置复位按键

⑤ 硬盘指示灯

⑥ 系统 / 网络指示灯

⑦ 电源开关 / 电源指示灯

型号：HS500

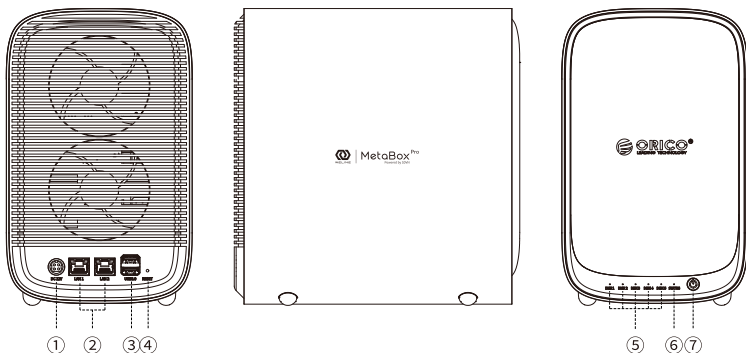

① 电源输入接口

② LAN 网络接口

③ USB3.0 接口

④ RESET 重置复位按键


⑤ 硬盘指示灯

⑥ 系统 / 网络指示灯


⑦ 电源开关 / 电源指示灯

## 硬盘安装( 以HS200为例,HS500类似 )


1. 从磁吸面盖底部轻轻用力取下面盖。

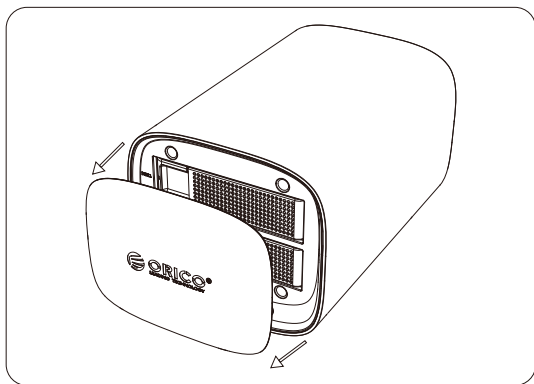


2. 往左边推动滑扣，自动弹出硬盘托架把手。

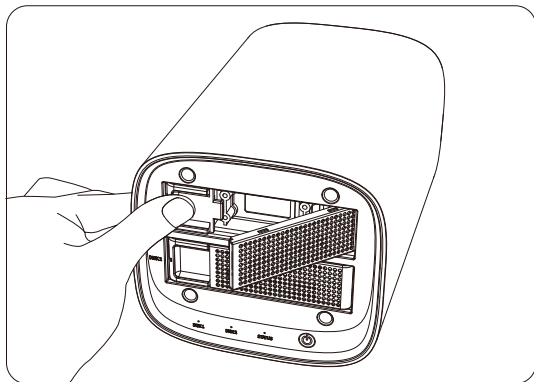


3. 抓住把手往外抽出硬盘托架。

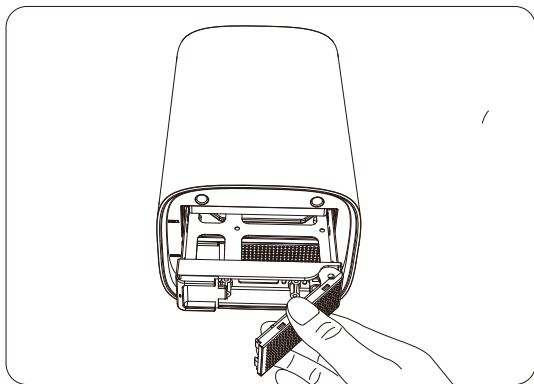

4. 装上 2.5 寸 /3.5 寸 SATA 硬盘，用螺丝固定住。

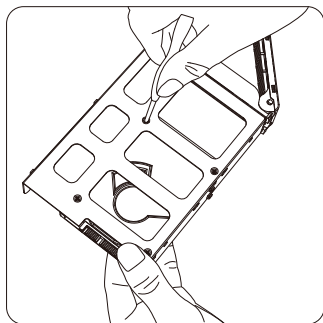


2.5 寸硬盘（使用底部 4 颗螺丝固定）

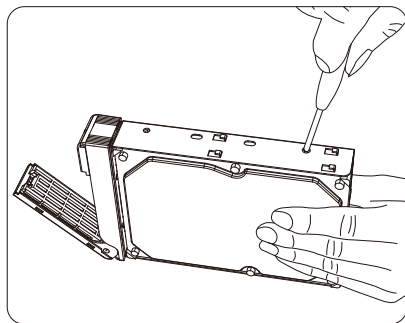


3.5 寸硬盘（使用两侧边 4 颗螺丝固定）

5. 将装好硬盘的托架装回 MetaBox Pro。

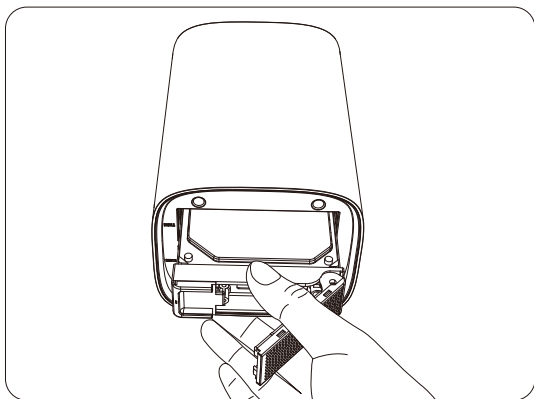


6. 将面盖靠近机身，自动吸附扣合面盖，完成硬盘安装。

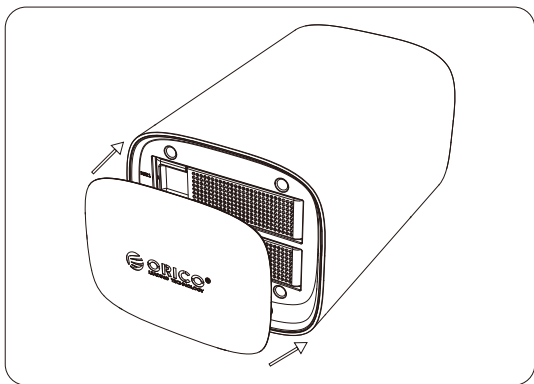


## 设备连接与开关机

### 设备连接

- ① 使用标配的网线，将一端连接 MetaBox Pro 的网络接口，另一端连接至路由器 LAN 口。
- ② 使用电源适配器，将一端连接 MetaBox Pro 的电源接口，另一端连接到电源插座。
- ③ 接通电源后，按电源开关键开机。

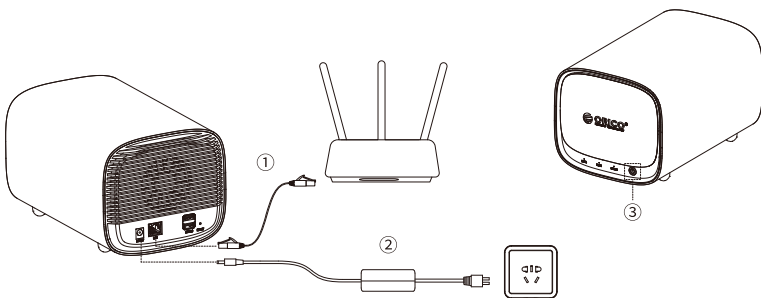

HS200

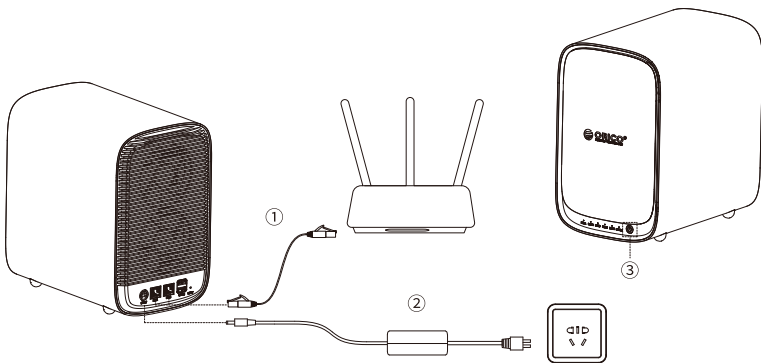

HS500

## 设备开关机

### 1. 支持按键开关机：

默认情况下，通电即自动开机。



开机：短按电源键，“滴”声响起后设备开始启动。

关机：长按电源键 3 秒，“滴”声响起后设备开始关机。

### 2. 支持远程关机：

通过客户端微链接 APP 内置的关机操作进行关机。

## 指示灯状态

图示	指示灯	颜色	灯光状态	状态说明
	电源灯	蓝色	蓝灯常亮	开机状态
			熄灭	关机状态
	系统 / 网络状态灯	蓝色 / 红色	蓝灯常亮	状态正常
			红灯常亮	设备未激活
			蓝灯慢闪	正在连接服务
			蓝灯快闪	正在升级
HS200:   HS500: 	硬盘灯	蓝色 / 红色	熄灭	未安装 / 未识别硬盘
			蓝灯常亮	硬盘正常 / 格式化完成
			红灯常亮	硬盘状态异常
			蓝灯快闪	硬盘格式化进行中
			红灯快闪	硬盘等待格式化

## 客户端下载与安装

### 手机客户端

请扫描下方二维码“微链接”二维码下载 APP 并安装，iOS 用户也可以在苹果 App Store 中搜索“微链接”。

Android:



苹果 iOS:



## 其他客户端

进入地址：<https://www.welinecn.com> 下载客户端并安装。

## 用户注册与登录

### 注册用户

1. 在手机上打开运行“微链接”APP。
2. 首次使用 App 需先注册个人账户，点击“暂无账户，点击注册”，按照要求格式完成用户注册。




### 用户登录

1. 注册完成后，返回到登录界面。



2. 输入已注册的账号（账号可以是注册的账号、绑定的邮箱、绑定的手机号）和密码，勾选用户协议和隐私政策，点击登录，跳转至“资源”首页。

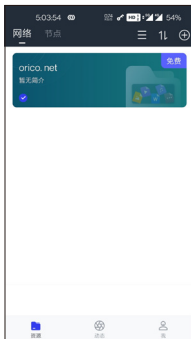

## 设备绑定

1. 进入“资源”首页，点击右上角“+”符号，再点击“扫一扫”，扫描 MetaBox Pro 设备机身二维码。
2. 扫码绑定设备成功，点击“确定”。



### ① 所有者 / 管理员绑定

- 首位用户绑定设备后成为该设备的所有者，一个设备只有一个所有者。

### ② 受邀用户加入

- 受邀用户需通过扫描所有者 / 管理员手机 App 分享的邀请二维码加入设备。
- 分享码有时效限制。
- 受邀用户扫码后需经过所有者 / 管理员二次确认，才能加入。



## 设备解除绑定

当用户不再使用 ORICO MetaBox Pro 时，可解除与设备的绑定关系。

### ① 所有者解除绑定

所有者解绑操作可以清除自己及所有受邀用户的全部数据，所有用户将无法继续使用该设备。

### ② 受邀用户解除绑定


受邀用户解绑操作仅清除受邀用户个人的全部数据，其他用户数据不受影响，仍可继续使用。

- 如确认解绑，请将 ORICO MetaBox Pro 中的数据提前备份。
- 因解绑而清除的数据将无法恢复，请务必谨慎操作。

## 文件管理

### 进入文件管理

1. 点击导航栏首页“资源”网络进入，会显示已绑定的 MetaBox Pro 设备节点。

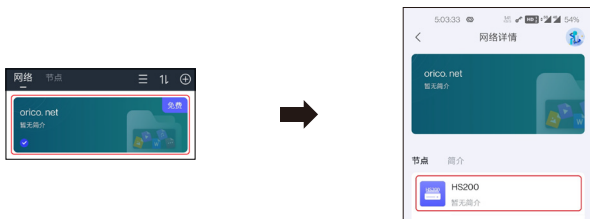

2. 点击设备节点，进入“节点详情”文件管理界面，即可操作各项功能了。



## 设备重置说明

如用户需要重置设备，可通过长按（10 秒钟）设备后端的重置按键（Reset）进行重置操作，此操作会重置用户设定的网络设置，但不会影响到用户存储到硬盘的数据，请谨慎操作。

## 安全须知

1. 请勿撞击、扔掷、针刺本产品，并避免跌落、挤压、弯曲产品。
2. 请勿在潮湿环境中使用或储存本产品，并避免本产品被液体浸湿或冲洗。
3. 请勿在高温、高粉尘环境中使用产品，并远离火源。
4. 请勿将本产品放置在日光中曝晒。
5. 请勿将本产品置于有腐蚀性物品的环境，严禁使用其他化学溶液清洗本产品。
6. 请勿将产品及附件放置于具有强大电磁场的器具中，以及远离磁性设备。
7. 请将产品及附件放在儿童触摸不到的地方，请勿让儿童在无人监管的情况下使用产品。
8. 请勿擅自拆卸和维修产品及附件，只有授权机构才可维修本产品。
9. 如需要配备电源适配器的产品，请使用本公司指定的电源适配器。
10. 本产品使用过程中如有任何问题，可随时与您的经销商或 ORICO 客户服务中心联系。

## 保修条款

本产品依照《中华人民共和国消费者权益保护法》和《中华人民共和国产品质量法》，实行售后三包服务，服务内容如下：

1. 自签收之日起 7 日内，产品出现性能故障并由 ORICO 客户服务中心鉴定之后，可享受退货、换货或免费维修服务。
2. 自签收之日起 15 日内，产品出现性能故障并由 ORICO 客户服务中心鉴定之后，可享受换货或免费维修服务。
3. 自签收之日起 24 个月内，产品出现性能故障并由 ORICO 客户服务中心鉴定之后，可享受免费维修服务。

## 保修限制条款

深圳市元创时代科技有限公司保修条款不适用于以下情况：

1. 超过保修条款期限。
2. 未经授权拆解、改动或维修过的产品，以及碰撞、进液、摔坏等人为损坏。
3. 水灾、火灾、雷击、地震等不可抗力造成的损坏。
4. 与本使用说明不一致的错误操作。
5. 产品或包装盒条码与实物不符，以及被涂改、撕毁。
6. 未经授权使用非原装配件造成的损坏。
7. 无有效的购买凭证。

## 声明

深圳市元创时代科技有限公司，版权所有

感谢您购买 ORICO 产品，为了更好的使用本产品的所有功能，请您在使用产品之前仔细阅读本使用说明介绍的产品功能、使用说明以及注意事项。

ORICO® 为深圳市元创时代科技有限公司注册商标。

本使用说明中提及的其他所有产品名称、商标、服务名称和公司名称，由其各自的所有者拥有。

本使用说明所提及的信息仅供参考，深圳市元创时代科技有限公司保留随时修改本使用说明中任何信息的权利，无需提前通知。除非有特殊约定，本使用说明仅作为使用指导，本使用说明中的所有陈述、信息等均不构成任何形式的担保。

深圳市元创时代科技有限公司不对因使用本使用说明相关内容及本使用说明描述的产品而产生的任何特殊的、附带的、间接的、继发性的损害进行赔偿，也不对任何利润、数据、商誉或预期节约的损失进行赔偿。在相关法律允许的范围内，在任何情况下，深圳市元创时代科技有限公司对您因为使用本使用说明描述的产品而遭受的损失的最大责任（除在涉及人身伤害的情况下根据适用的法律规定的损害赔偿外）以您购买本产品所支付的价款为限。

Thanks for choosing ORICO!  
Please read this user’ s manual carefully before using it!

What is in the box

1. The Product.....1PCS  
2. Ethernet Cable.....1PCS  
3. Power Cord / Power Adapter.....1PCS  
4. The Screwdriver.....1PCS  
5. Screw package.....2PCS  
6. User Manual .....1PCS

The product, accessories and package may optimized for better application performance.  
We sincerely sorry that they may not exactly match with what showing in manual and  
appreciate your please adhere to the original products and contact ORICO customer care  
team if any further concern. Thank you very much.

Network usage environment


- 1. MetaBox Pro needs to be connected to the Internet environment (with Internet access)  
before it can be used.
- 2. It is recommended that you connect MetaBox Pro to a first-level router, the faster the  
network response speed.
- 3. Please set the "UPNP" option of the router to "ON" state.

## Specifications

Product Name	MetaBox <sup>Pro</sup>	
Model	HS200	HS500
Drive Bays	2 Bays	5 Bays
Dimensions	222(L)×145(W)×129.5(H)mm	222(L)×145(W)×231.5(H)mm
Material	Aluminum Alloy+ABS	Aluminum Alloy+ABS
CPU	Intel Celeron N4020 Daul-Core	Intel Celeron N4120 Quad-Core
Flash	8GB eMMC	8GB eMMC
Memory Capacity	4GB DDR4	4GB DDR4
Internal interface	SATA3.0 6Gbps×2, M.2 NVMe 2280×1	SATA3.0 6Gbps×5, M.2 NVMe 2280×1
External interface	2.5 Gigabit Ethernet×1, USB3.0 Type-A 5Gbps×2	2.5 Gigabit Ethernet×2, USB3.0 Type-A 5Gbps×2
Ethernet Connection Speed	2.5GbE	2.5GbE
RAID Levels	LVM / RAID 0 / RAID 1	LVM/ RAID 0 / RAID 1 / RAID 5 / RAID 10
Power Adapter	12V---5A, 60W	12V---10A, 120W
Compatible Drive Type	3.5" SATA HDD, 2.5" SATA HDD, 2.5" SATA SSD	
Working Environment	Temperature: 0°C to 40°C, Humidity: 5% to 95%	

# Product Illustration

Model: HS200

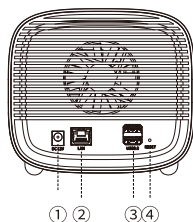

- ① Power Input
- ② LAN Network Interface
- ③ USB3.0 Interface
- ④ RESET Reset Button
- ⑤ Hard Disk Indicator
- ⑥ System / Network Indicator
- ⑦ Power Switch / Indicator


Model: HS500




- ① Power Input
- ② LAN Network Interface
- ③ USB3.0 Interface
- ④ RESET Reset Button
- ⑤ Hard Disk Indicator
- ⑥ System / Network Indicator
- ⑦ Power Switch / Indicator

## Installing the hard disk (Take HS200 for example, HS500 is similar)


1. Open gently from the bottom of the face cover.

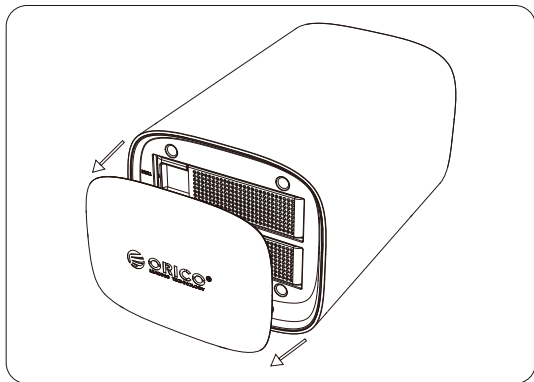


2. Push the slip buckle in the left direction, auto-pop tray handle.

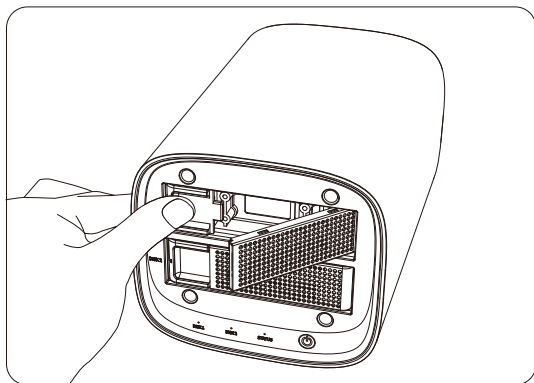


3. Grab the handle and pull out the tray.

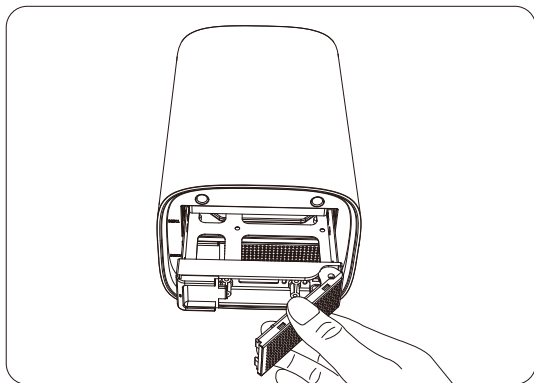

4. Install the 2.5 " / 3.5" SATA HDD/SSD, secured with screws.

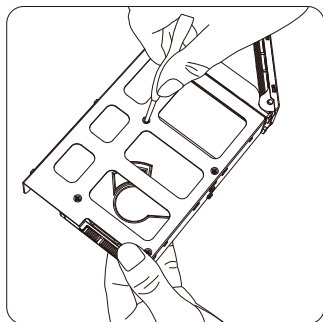


2.5 inch hard disk  
(Lock 4 screws at the bottom)

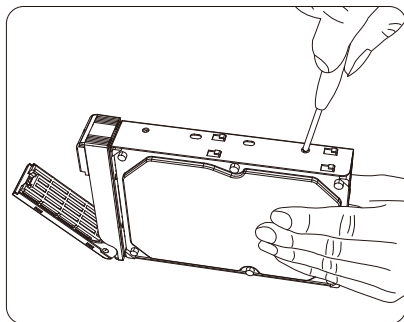


3.5 inch hard disk  
(Lock 4 screws on both sides)



5. Put the hard drive tray back into the MetaBox Pro.

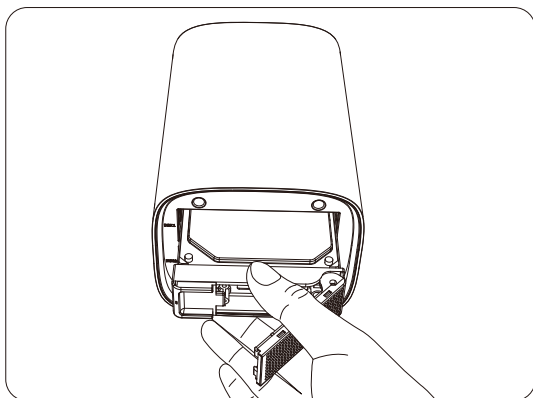


6. Bring the face cover close to the fuselage, and automatically attach the cover to complete the hard drive installation.

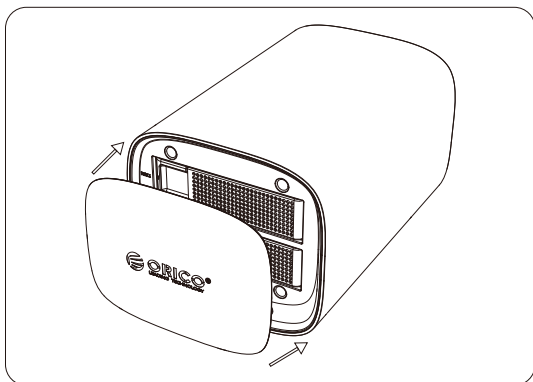


## Device Connection Startup And Shutdown

### Device connection

- ① Use the standard network cable, connect one end to the network port of the MetaBox Pro, and the other end to the router LAN port.
- ② Using the power adapter, connect one end to the power port of the MetaBox Pro and the other end to the power socket.
- ③ After turning on the power, press the power switch key to turn on.

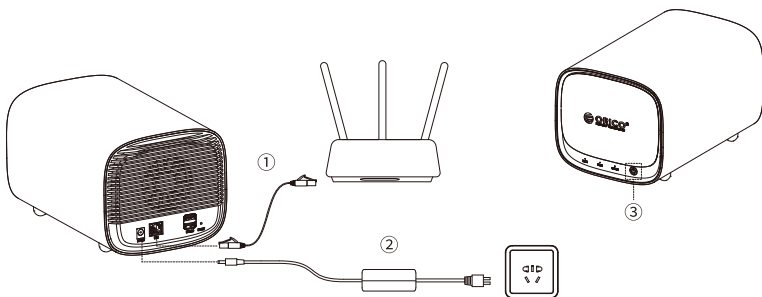

HS200

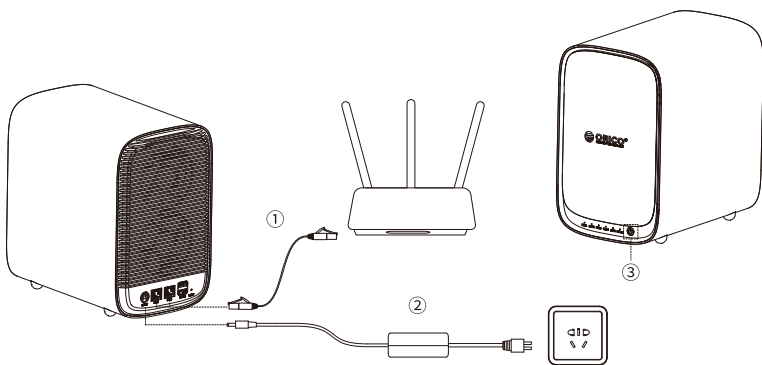

HS500

## Device startup and shutdown

### 1. Button to turn on and off

By default, it automatically turns on when power is applied.





Power on: Short press the power button, the device starts to start after the "di" sound.

Shutdown: Press and hold the power button for 3 seconds, the device starts to shut down after the "beep" sound.

### 2. Remote shutdown

Shutdown through the client Weline APP operation.

## Light Status

Illustration	Indicator light	Color	Status	Description
	Power Light	Blue	Steady blue	Turn ON
			Extinguished	Turn OFF
	System / Network Status Light	Blue/Red	Steady blue	Operating normally
			Steady red	Not activated
			Slow flashing blue	Connecting to the server
			Fast flashing blue	Is upgrading
<p>HS200:</p>  <p>HS500:</p> 	Hard Drive Light	Blue/Red	Steady blue	Formatting complete
			Steady red	Abnormal
			Flashing blue	Formatting
			Flashing red	Waiting for formatting
			Extinguished	Not installed / not recognized hard disk

## Client Download And Installation

### Mobile Client

Please scan the "Weline" QR code below to download and install the APP. iOS users can also search for "Weline.io" in the Apple App Store.

Android:



iOS:





## Other Clients

Enter the address: <https://www.weline.io>, to download the client and install it.

## User Registration And Login


### Registered User

1. Please open and run the "Weline" APP on your mobile phone.
2. When using the APP for the first time, you need to register a personal account, click "No account, click Register", and complete the user registration as required.

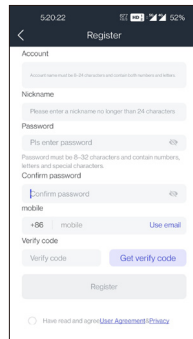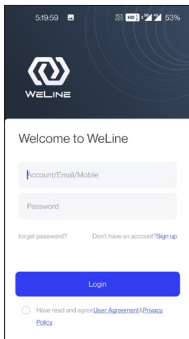


## User Login

1. After the registration is complete, return to the login window.

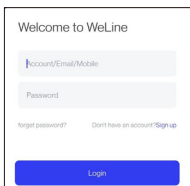


2. Enter the registered account and password, check the user agreement and privacy policy, click Login, and jump to the "Resources" home page.

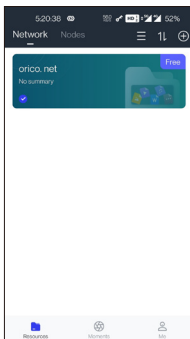


## Device Binding

1. Go to the "Resources" homepage, click the "+" symbol in the upper right corner, and then click "Scan" to scan the QR code of the MetaBox Pro device.

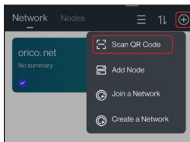

2. Scan the code to bind the device successfully, click "OK".

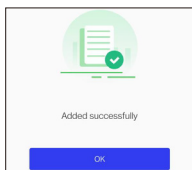

① Owner/Administrator binding

- The first user becomes the owner of the device after binding the device, and a device has only one owner.

② Invited users to join

- The invited user needs to scan the invitation QR code shared by the owner/administrator to join the device.
- The sharing code is time-limited.
- After scanning the QR code, invited users need to be confirmed by the owner/administrator before joining.

## Device unbinding

① Owner unbind

Owner unbinding can clear all data of himself and all invited users, and all users will no longer be able to use the device.

② Invited users unbind


 
The unbinding operation of an invited user only clears all personal data of the invited user, and other user data is not affected and can still be used.

- If you confirm the unbinding, please back up the data in ORICO MetaBox Pro in advance.
- The data cleared due to unbinding cannot be recovered, please operate with caution.


## File Management

### Enter File Management

1. Choose Resources > Network from the navigation bar to access the bound MetaBox Pro device.

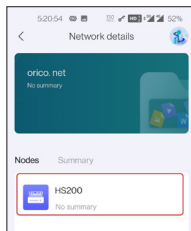

2. Click the device node to enter the Node Details file management window. You can operate various functions.

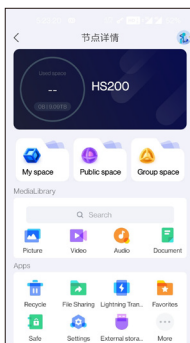

## Device reset instructions

If the user needs to reset the device, he can perform the reset operation by long pressing (10 seconds) the reset button (Reset) on the back of the device. This operation will reset the network settings set by the user, but will not affect the user's storage to Data on the hard disk, please operate with caution.

## Notice

1. Please do not hit, throw, or puncture the product, and avoid dropping, squeezing, or bending.
2. Please do not use or store this product in a humid environment and avoid being wetted or rinsed with liquids.
3. Please do not use the product in a hot, high-dust environment and keep it away from fire.
4. Please do not expose this product to the sun.
5. Please do not place this product in a corrosive environment. Do not use other chemical solutions to clean the product.
6. Please do not place the product or accessories in appliances with strong electromagnetic fields and away from magnetic equipment.
7. Please keep the product and accessories away from children. Do not allow children to use the product without supervision.
8. If you need a product with a power adapter, please use the power adapter specified by our company.
9. Please do not disassemble and repair the product or accessories without the authorization of ORICO.
10. If you have any questions during the use of this product, please feel free to contact your dealer or ORICO Customer Service Center.

## FCC

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2)this device must accept any interference received, including interference that may cause undesired operation.



## Declaration

ORICO Technologies Co., Ltd., all rights reserved.

Thank you so much for purchase ORICO product. Please refer to this manual when using orico product or experienced issues. Additionally, please kindly contact ORICO customer care team if any concern.

ORICO® is registered trademark of ORICO TechnologiesCo., Ltd.. Any other product, trademark, service or company mentioned herein is trademark or registered trademark of the respective owners.

This manual is for reference only and it's not a guarantee.

ORICO Technologies Co., Ltd. reserve all rights of maintenance to this manual and shall not liable for any lost or damage resulting from this manual. Please kindly contact orico customer care team when any concern.

ORICO Technologies Co., Ltd shall not liable for compensation and maintenance of the following conditions.

1. Any special, incidental, indirect and secondary lost or damage.
2. Profit and revenue lost or damage.
3. Files, data, drive and device lost or damage.

Note: Compensation for lost or damage resulting from This manual or orico product shall not exceed the payment of your purchase to this product.



官方网站



Website

## 深圳市元创时代科技有限公司 (ORICO Technologies Co.,Ltd.)

---

电话 / Tel: 86-755-25196059

邮箱 / E-mail: supports@orico.com.cn

官方网站: <http://www.orico.com.cn>

Official Website: <http://www.orico.cc>

执行标准: GB 4943.1-2011

公司地址: 深圳市龙岗区吉华街道甘坑社区甘李六路12号中海信创新产业城14栋A1903-1904

Company Add: 1903-1904, 14A, Zhonghaixin Innovation Industrial Park, no.12, Gan Lee Sixth Road, Gankeng Community, Jihua Street, Shenzhen, China

工厂地址: 东莞市常平镇塘角村塘角路24号元创动力产业园F栋2楼

Factory Add: 2/F, Block F, Internet & Creativity Industrial Park, No.24 Tangjiao Rd, Changping Town, Dongguan, China

---